

Loading Procedure

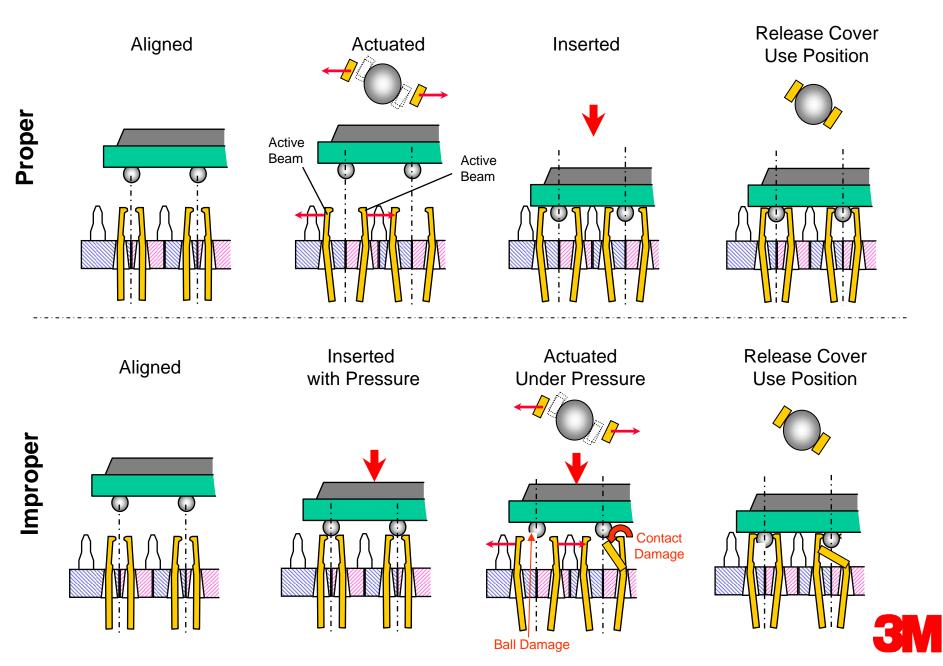



Instruction of O/T Socket by Manual PKG Loading

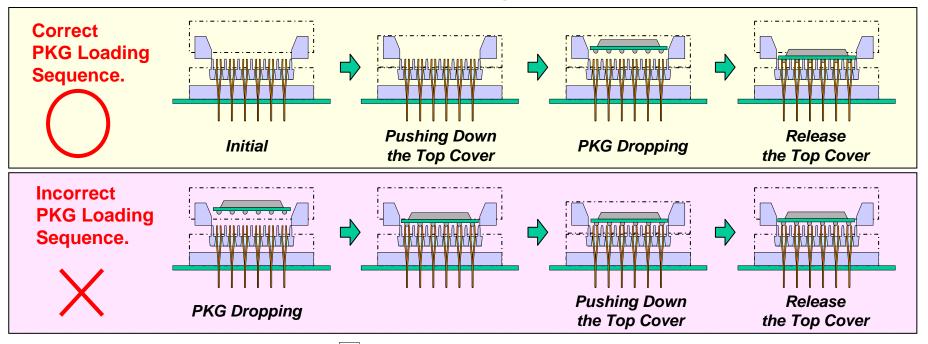

Notice:

Push down the Top Cover horizontally by Adequate Force.

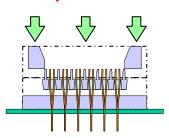

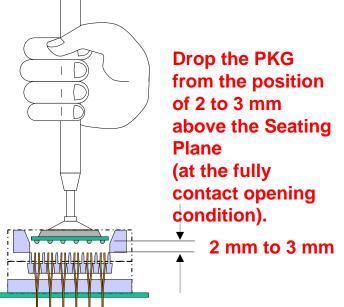



Don't push the PKG top at the loading (with finger or vacuum pen).

